



Installation Instructions

LEICHTmount 2.1 E/W

Aerodynamic flat roof system for east/west orientation



1 Introduction

1.1	Intended use	3
1.2	About this document	3
1.3	Warnings	4
1.4	General information — standards and guidelines	4
1.5	Description of the system	6

2 Installation — LEICHTmount 2.1 E/W

2.1	System components	11
2.2	Installation — frame and modules	12
2.3	Installation — Alpine supports	16
2.4	Installation — ballast trays	17
2.5	Installation — ballast	18

3 Disassembly and removal

3.1	Disassembly	19
3.2	Disposal	19

4 Terms of use and warranty

4.1	User agreement for the LEICHTmount 2.1 E/W	20
4.2	Warranty / disclaimer	20

Read these installation guidelines carefully before installing the S:FLEX mounting system and retain them for future reference! These installation guidelines are only complete with the project-specific implementation plans (project report)!

1.1 Intended use

The S:FLEX LEICHTmount 2.1 E/W PV mounting system is a frame system for mounting PV modules without roof penetration.

It is designed exclusively for the installation of PV modules.

The LEICHTmount 2.1 E/W is designed for the installation of systems with an east/west orientation and a pitch angle of 10°.

The system is configured for horizontal module installation.

It can be used for almost all commercially available modules with the following dimensions:

module width 950 – 1.050 mm; module length 1.473 – 1.725 mm / 1.828 – 2.080 mm.

The use of modules with deviating dimensions must be tested and approved for each project.

The LEICHTmount 2.1 E/W system is designed for easy installation on the following standard industrial roof coverings: foil, bitumen, gravel, green, concrete.

Any use that deviates from this is regarded as improper use. In particular, compliance with the instructions in these installation guidelines constitutes intended use. S:FLEX GmbH accepts no liability for damage resulting from non-observance of the installation guidelines or from misuse or incorrect use of the product.

1.2 About this document

This installation guide describes the installation process for the LEICHTmount 2.1 E/W system on flat roofs.

The LEICHTmount 2.1 E/W system includes suitable solutions for different load zones.

- *LEICHTmount 2.1 E/W Standard Version for normal loads*
- *LEICHTmount 2.1 E/W Alpine Version for high loads*

This document shows the installation recommendations for:

- *LEICHTmount 2.1 E/W with framed PV modules mounted horizontally*
- *LEICHTmount 2.1 E/W Alpine with framed PV modules mounted horizontally*

It must be ensured that only current and complete installation guides are used for the installation process.

1.3 Warnings

The warning information given in these installation guidelines indicate safety-related information. They are:



If not observed, there is a major risk of injury as well as a risk of death.



Failure to observe this may lead to property damage.

1.4 General information — standards and guidelines

Every photovoltaic system must be installed in accordance with the instructions stipulated in the supplied installation guidelines and the project report.

These installation guidelines are based on state-of-the-art technology and many years of experience of installing our systems on site. It must be ensured that only the current and complete installation guidelines are used for the installation, and that a print-out of the installation guidelines is stored in the immediate vicinity of the system. Subject to technical changes.

The project report is part of the installation instructions and is created on a project-specific basis. All of the information given in the project report must be strictly observed. The location-based static calculations are carried out in the project report. The S:FLEX FLAT mounting system must be designed and created with the S:FLEX software (Solar.Pro.Tool).

Since individual project-specific features must be considered with every roof, an expert clarification must always be carried out prior to installation. Before installation, the PV system creator must ensure that the existing roofing and roof substructure are suitable for the occurring additional loads. The condition of the roof substructure, the quality of the roof covering and the maximum load-bearing capacity of the roof construction must be checked by the system creator. Contact a local structural engineer for this purpose.

When installing the PV system, always comply with the module manufacturer's installation instructions. In particular, it is necessary to check that the module manufacturer's instructions regarding the module clamping guidelines (module clamping surface and clamping range) are complied with. If this is not the case, the customer must obtain a declaration of consent from the module manufacturer before the installation, or the mounting system must be adjusted according to the module manufacturer's guidelines.

The requirements for the protection of PV mounting systems against lightning and surges must be met in accordance with the DIN and VDE regulations. The specifications of the relevant power supply company must be observed.

Care must be taken that the PV system to be installed does not impair the functioning of the existing lightning protection system. It is also important to ensure that the PV system is designed so that it can be included in the protection zone of the building's lightning protection system. The separation distances between the PV system and the lightning protection system specified in the relevant regulations must be adhered to. During installation, local fire regulations must be observed, e.g. firewalls must not be overlaid and a certain clearances must be observed.

If the roofing is altered, the manufacturer's guidelines must be observed. During and after the installation, the frame components may not be stepped on or be used as a climbing aid. There is a risk of falling and the roofing underneath could be damaged.

Prior to installation, the creator of the photovoltaic system is to ensure that the installation is carried out while strictly adhering to national and location-specific building regulations, safety and accident prevention regulations, standards and environmental protection regulations.

Every person who installs the S:FLEX PV fastening systems is obligated to independently inform himself/herself of all rules and regulations for a professionally correct planning and installation and to adhere to said rules and regulations during the installation. This also includes compliance with the current state of the rules and regulations.

The installation of the PV system may only be carried out by trained specialists.



The installation of the S:FLEX substructure and the PV system may only be carried out by trained specialists. System components must not be used as step ladders. The modules must not be stepped on. When working on roofs, there is a risk of falling off and falling through roofs. A fall can result in injury or death. Ensure that appropriate safe access equipment and fall protection (e.g. scaffolding) are provided as well as protection from falling parts.



Check the building statics and construction/condition of the roof substructure before starting the installation. During installation, the instructions in the installation guidelines and project report must be strictly observed. Failure to observe the installation guidelines and the project report may result in damage to the PV system and to the building.

1.5 Description of the system

The LEICHTmount 2.1 E/W system includes solutions to suit a range of different requirements.

System properties

Mounting angle:	the LEICHTmount 2.1 E/W is available with a 10° mounting angle
Roof edge spacing:	Roof areas F and G can be used
Module dimensions:	950 – 1.050 mm x 1.473 - 1.725mm/ 1.828 – 2.080mm (width x length). The use of modules with deviating dimensions must be tested and approved for each project.
Max. roof pitch:	4°
Building height:	max. 25 m
Wind load:	max. 2.4 kN/m ² (design value as combined load of dead weight and wind pressure)
Snow load:	LEICHTmount 2.1 Standard LEICHTmount 2.1 Alpine for high loads
Modules:	The system requires approval for use of modules with this type of fastening (clamp on the module's short side). This approval can either be given generally as part of the module certification or, as the case may be, issued by the module manufacturer on a project-specific basis.
Materials:	Aluminium structural supports EN AW 6060 T64, aluminium module mid clamps EN AW 6063 T66, stainless steel screws, galvanised steel wind shields
Prerequisites:	Proof of static load capacity of the roof and the roof insulation must be provided by customer. Our general terms and conditions, warranty conditions and the user agreement apply.



The module manufacturer's installation instructions must always be observed.

Flat-roof coverings

The LEICHTmount 2.1 E/W can be installed on the following flat-roof coverings:
foil, bitumen, gravel, green, concrete.

The compatibility of the roof covering and the building screen mats must be ensured. The roof covering (and possibly the insulation layer) must be able to absorb the pressure loads of the PV system. The friction coefficient of the existing roof covering is used as the basis for the ballast chart and must be determined by the customer.

If the roofing gravel lies directly on the water-bearing roof skin, the system must not be placed on the gravel layer. In this case, the gravel must be removed in the area of the supports.




S:FLEX GmbH may provide a measuring device in order to determine the project-specific friction coefficient.

Row spacings


LEICHTmount 2.1 E/W (18°): 464 mm module spacing with standard front support

LEICHTmount 2.1 E/W (18°): 297 mm module spacing with short bottom support

E/W 18° irradiation angle

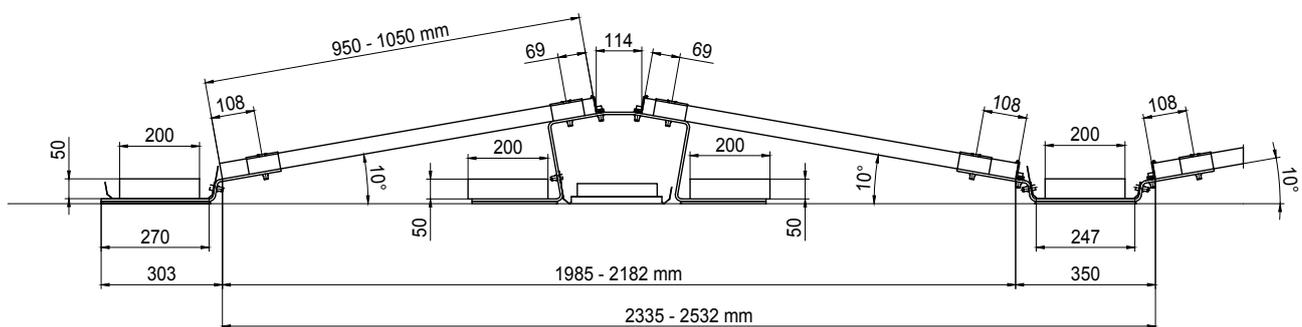


E/W 18° irradiation angle short bottom support

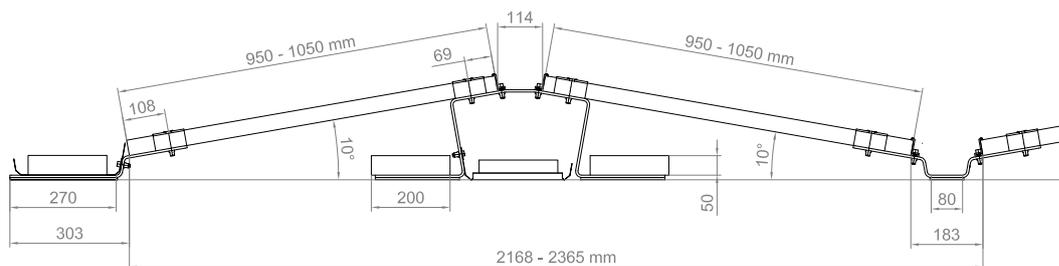

Basic conditions for the module array size

The S:FLEX LEICHTmount 2.1 E/W system allows a variable module arrangement. This allows optimal utilisation of the roof area. In principle, the module layout should always be based on the module arrangement specified in the project report. The maximum size of the module array is 192 modules (12x2 modules per row and 8 rows).

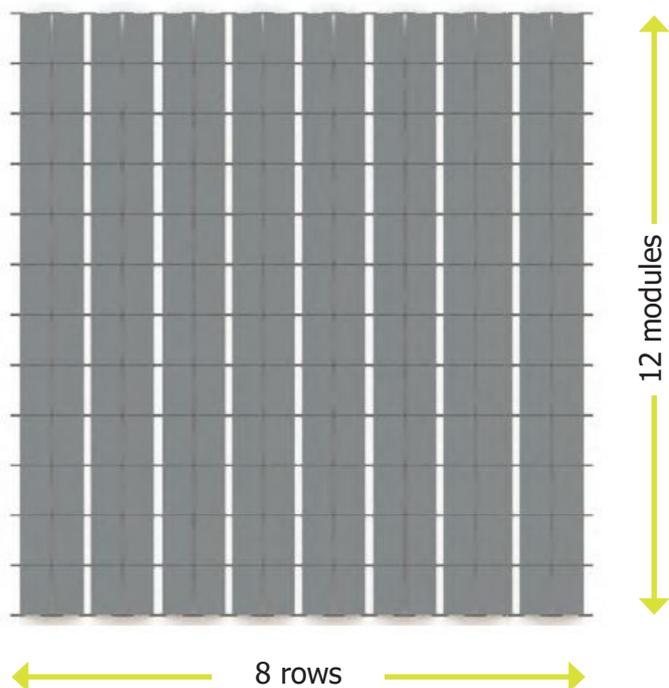

Maximum module array size: 8 rows with 12 double modules (192 modules).

System design

LEICHTmount 2.1 E/W Standard


LEICHTmount 2.1 E/W Alpine for high loads

The standard system is designed for normal wind and snow loads, the Alpine system for high wind and snow loads. All values are design values as a combined load of dead weight, wind and snow pressure.

This information should be used as a rough guide only. The information from the project report always takes priority!

Therefore, first determine the snow and wind load zone in which the system will be used.

The system is wind-tunnel tested and UL-certified.

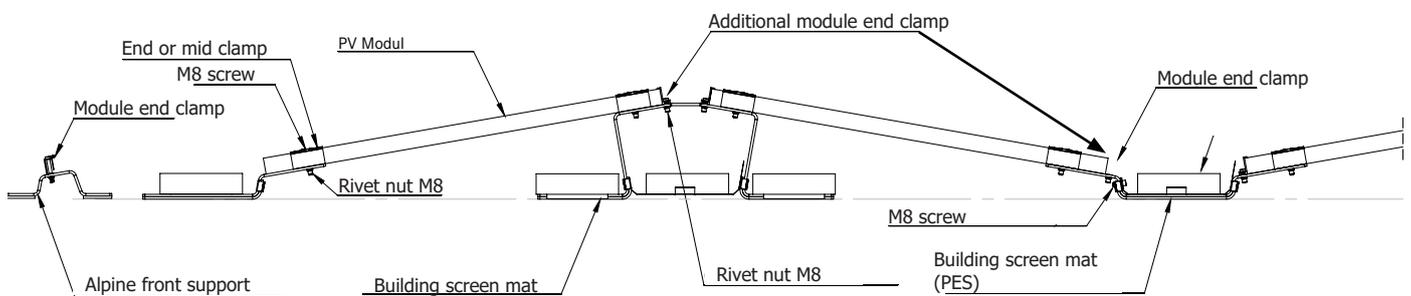


Grounding

Equipotential bonding between the individual system components must be ensured according to the respective country-specific guidelines and standards.




The module manufacturer's installation instructions must always be observed.

The requirements for the protection of PV mounting systems against lightning and surges must be met in accordance with the applicable regulations. The specifications of the relevant power supply company must be observed. Care must be taken that the PV system to be installed does not impair the functioning of the existing lightning protection system. It is also important to ensure that the PV system is designed so that it can be included in the protection zone of the building's lightning protection system. The separation distances between the PV system and the lightning protection system specified in the relevant regulations must be adhered to. Contact a local lightning protection specialist.

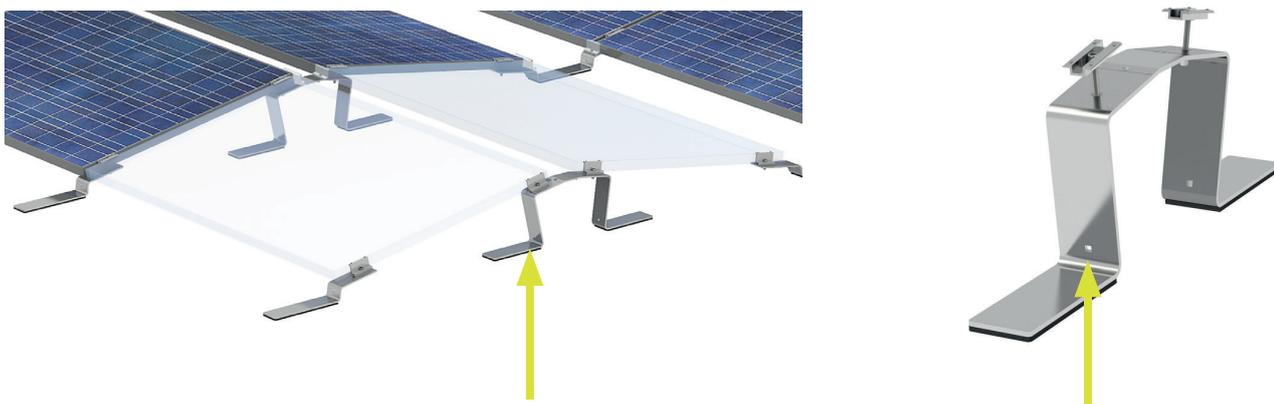

The grounding cable is attached via the square hole in the Top part.

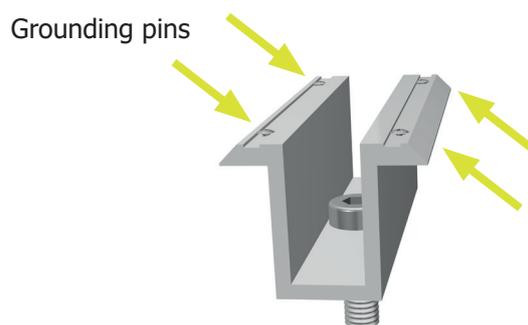

The functional capability of the earthing arrangements for the system via the module mid clamps with grounding pins, and of the system itself, was verified during UL 2703 certification.



The requirements for the protection of PV mounting systems against lightning and surges must be met in accordance with the applicable regulations. Contact a local lightning protection specialist. The prescribed separation distance between the PV system and the lightning protection system must be observed. S:FLEX GmbH assumes no liability whatsoever for damage caused by lightning strikes or earthing problems.

2.1 System components

Front part



Top part



Bottom part



Bottom part short



Ballast tray 880



Ballast tray 1775/2130



Module end clamp



Module mid clamp



Hexagon socket screw (M8x30)



Flat washer M8x30



Cable clips




Blind rivet nut VZ M8



Flathead screw



Hexagon socket nut M8x16

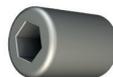

Alpine front support



Building screen mat (PES)



2.2 Installation — frame and modules



The design and planning of the LEICHTmount system must be undertaken using the S:FLEX Planning Software (Solar.Pro.Tool). Please make sure that the position of the modules on the roof and the ballast distribution correspond exactly to the specifications in the project report. If the module distribution on the roof is changed due to local circumstances, such as interfering surfaces, the static calculation must be repeated using the S:FLEX planning software (Solar.Pro.Tool).



Do not leave the installation site until the wind shield and ballast for each module have been installed in accordance with the ballast chart. Without the wind shields and ballast, the stability of the module array is not guaranteed.


The correct position of the ballast blocks and the building protection mats should be checked as part of the annual maintenance inspection. It is the responsibility of the installing company to check the specification and weight of the required ballast blocks.

Measure the roof surface.

Mark the initial point with a chalk line.



Measure in accordance with the project report.

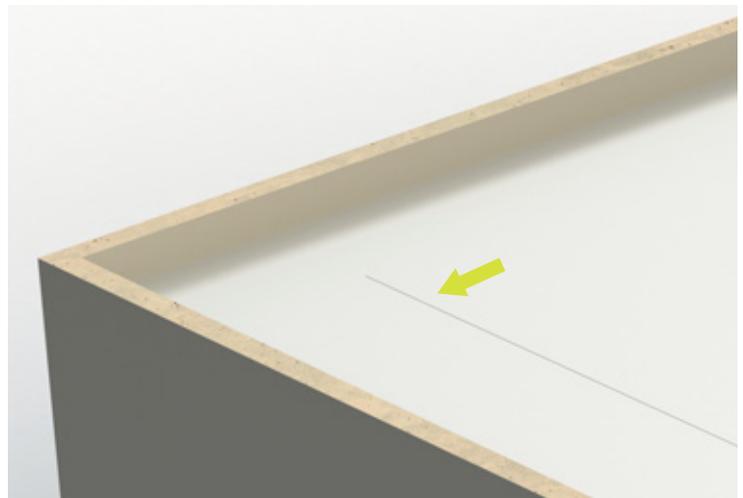




On bituminous roofs, all supports should be underlaid with an additional layer of bitumen roofing membrane to prevent possible sinking of the columns into the roofing membrane at higher temperatures.

Place the module end clamps and module mid clamps on the LEICHTmount 2.1 E/W supports.


Attach an additional module end clamp on each bottom part and top part. An additional module end clamp is not required for the front part or at the start and end of each row.

Position the front part.

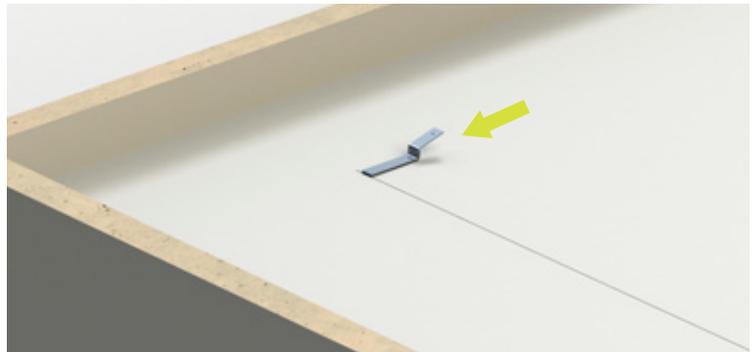


Secure the front part with a ballast block.


Place the ballast block on the front part and the supplied building screen mat (PES) to ensure a stable support.

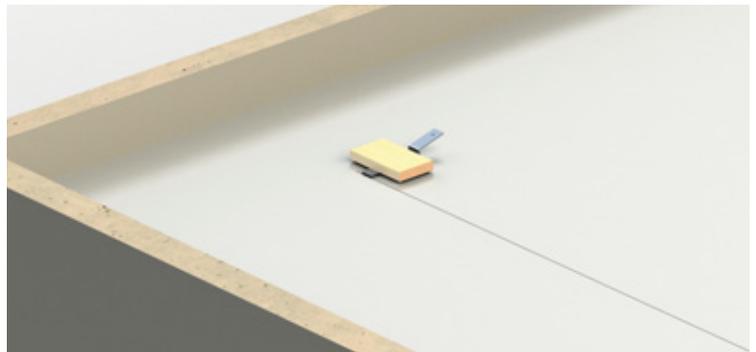

Place the connector at approximately the required vertical distance (module width). The exact distance is adjusted during installation of the module.

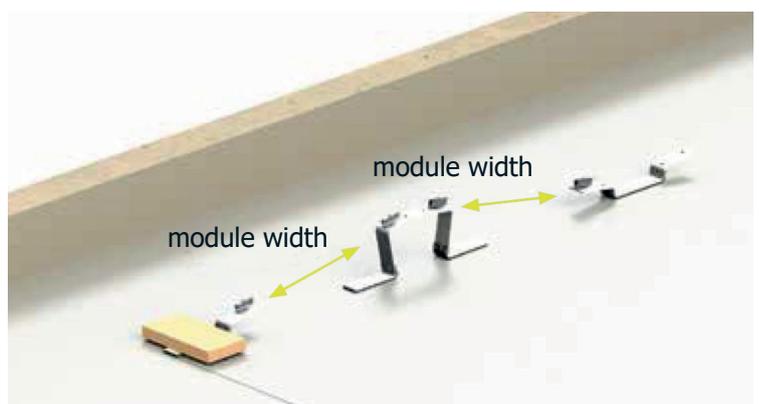


Place the front parts and connectors at approximately the required horizontal distance (module length). The exact distance is adjusted during installation of the module.

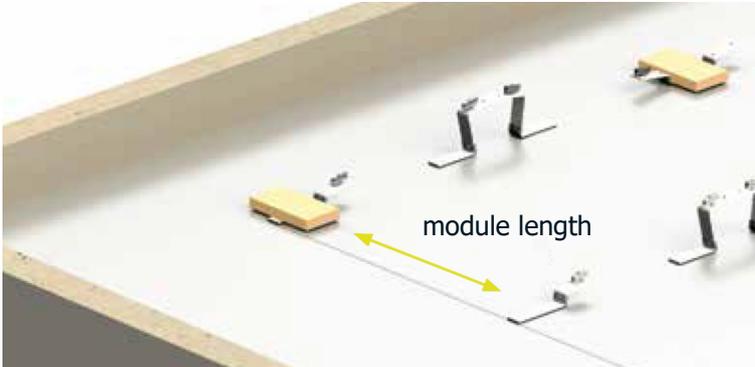

Align the front part and connector using a guideline.

Install the module on the front parts in the horizontal orientation and align the top so that it sits flush with the LEICHTmount connector or end part. Tighten the module end clamps (tightening torque 15 – 20 Nm).

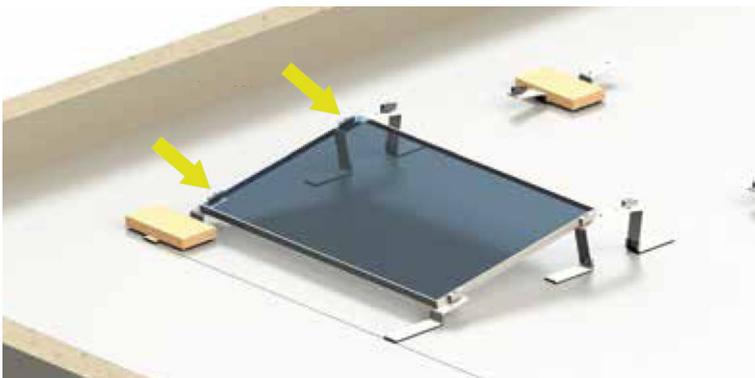


Tighten the module end clamps with 15 – 20 Nm.

Now slide the next module under the module mid clamps and align it with the additional module end clamps. Then the module mid clamps and the additional module end clamps can be tightened and another module mounted. (Tightening torque 15 – 20 Nm).



Mount the module mid clamps and additional module end clamps with 15 - 20 Nm.

At the end of the row, attach a module end clamp and screw it tightly into position after aligning the last module. The clamps must be tightened with a torque of at least 15 Nm, up to a maximum of 20 Nm. For easier orientation of the modules, markings for the upper/lower edge of the modules have been applied to the front parts and connectors. Lay modules exactly at the markings.

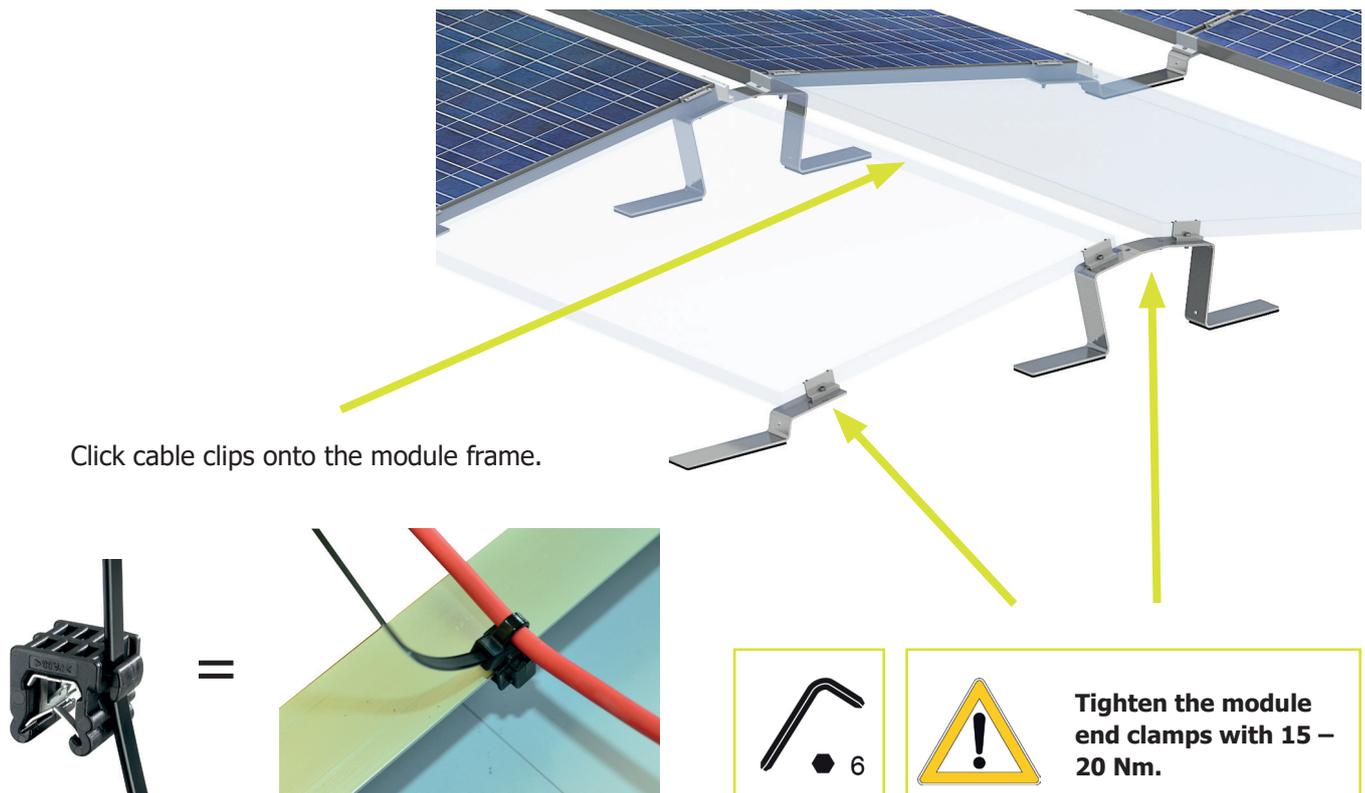

Laying the DC cable:

The string cables are fixed to the module frame with cable clips.


Laying on the roof:

The string cables are combined in cable management ducts. The cable ducts can be mounted on stone slabs and guided between or next to the module rows. The ducts and substructure are not included in the S:FLEX scope of delivery.

Proceed as described for the following rows.

2.3 Installation — Alpine supports

Position the top part in the centre of the module and secure it with two module end clamps.

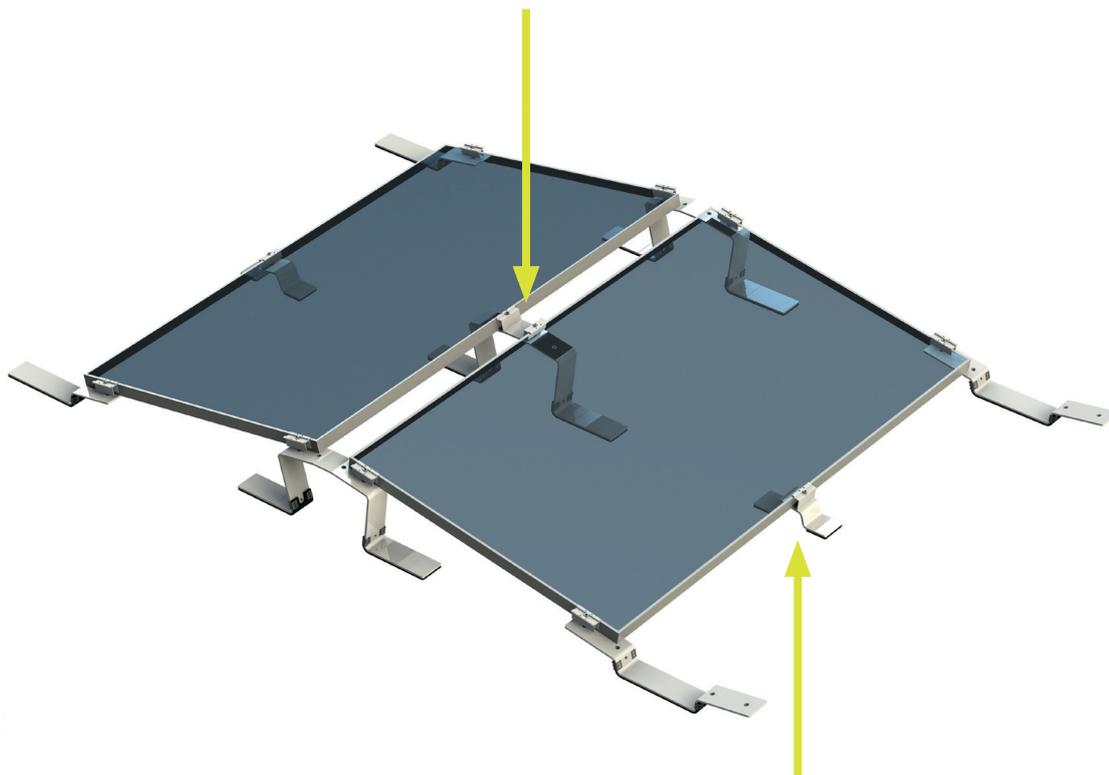

Position an Alpine front support in the centre of the module using a module end clamp and screw it tight.

The ballast distribution must correspond to the plan in the project report. The quantity and distribution of the ballast depend on parameters such as location, building height, building surroundings, roofing type and roof pitch.


2.4 Installation — ballast trays

The ballast trays must be used as soon as the specified ballast weight per support is exceeded.



In this case, a distinction is made between the standard ballast tray (880) and the long ballast tray (1775/2130), depending on the system and ballast blocks being used.

The ballast trays are also used if the point load is too high for a larger supporting surface.

The ballast trays for the front part is attached using a flathead screw inserted from the rear through the square hole, and a hexagonal socket nut.

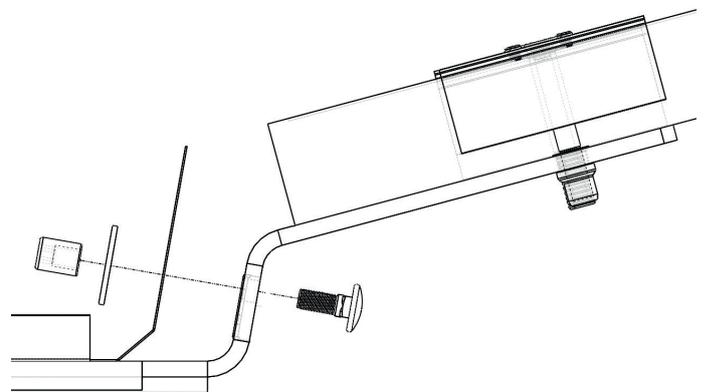


Place a self-adhesive building screen mat (PES, included in the scope of supply) on the left and right side underneath the ballast tray.

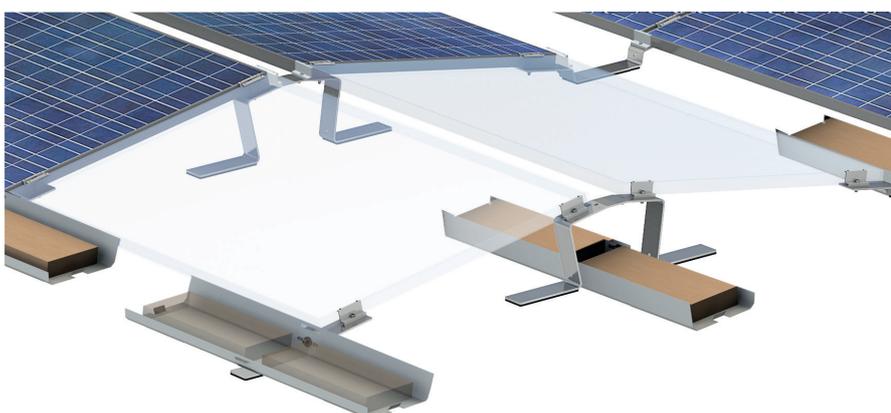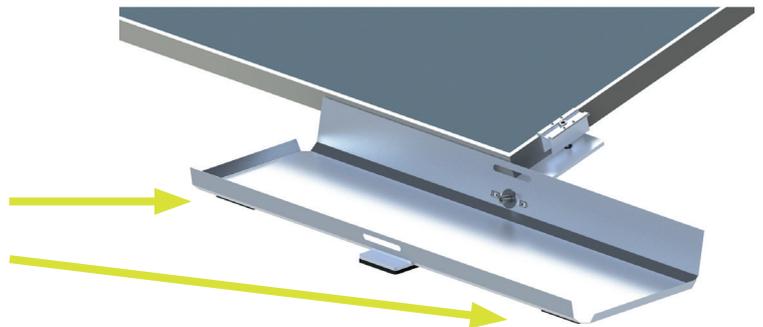

2.5 Installation — ballast

Place all required ballast blocks on the front parts, connectors, end parts and ballast trays in accordance with the structural calculation in the project report. Always attach building screen mats (PES) on the left and right side underneath the ballast blocks and trays. We recommend using two building screen mats (PES) per ballast block or ballast tray 880. Four building screen mats (PES) should be used for the ballast tray 1775/ 2130.

The maximum width of a ballast block for the system is 200 mm. The blocks used must be able to withstand the local weather conditions and have a compressive strength of at least 21 N/mm².

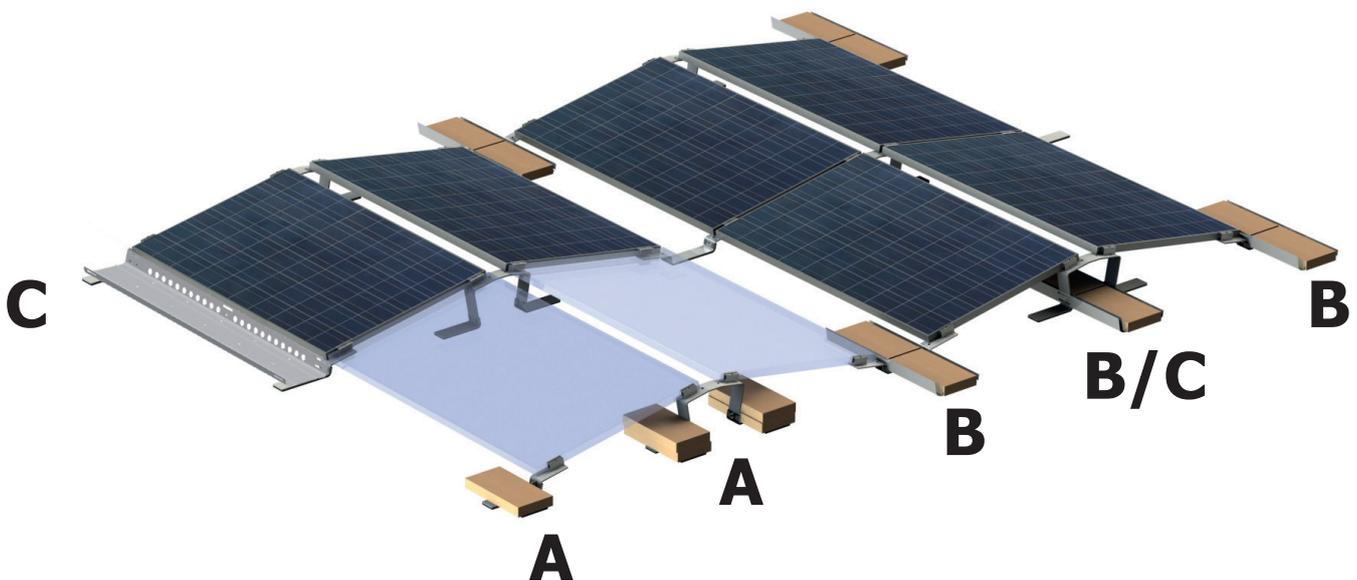

Variant A: Standard ballast without tray; ballast lies directly on the front part and connectors.

Variant B: Ballast tray 880, mounted on a front part or connector

Variant C: Ballast tray 1775/2130, mounted on two front parts or connectors



The position of the ballasting must always be carried out in strict adherence to the planning documents. A different distribution or omission of ballast elements may compromise the positional stability of the entire system and represents a major risk. Deviations from the planning must always be agreed with S:FLEX GmbH and may only be carried out after written approval. Do not leave the installation site until the ballast for each module has been installed in accordance with the ballast chart.

Without the ballast, the stability of the module array is not guaranteed. The correct position of the ballast blocks and the building screen mats (PES) should be checked as part of the annual maintenance inspection. It is the responsibility of the installing company to check the specification and weight of the required ballast blocks.

3.1 Disassembly

Disassembly of the S:FLEX mounting system may only be carried out by trained specialist personnel. Observe the same safety instructions, standards and guidelines as provided for the installation. In general, disassembly is carried out in reverse order to the described installation procedure.



Before disassembly, disconnect the PV modules from the mains network. Disconnect all of the PV modules' electrical cables (string lines and plug connectors) and remove them from the frame system.



Then remove the modules and store them safely. Improper disassembly can lead to damage to the modules.



Disassemble frame system and safely store all of the parts. Any holes in the roof must be sealed by a specialist.

3.2 Disposal

The S:FLEX mounting system consists of aluminium, stainless steel and steel components. These materials can be recycled after disassembly. The frame system must only be disposed of by a specialist waste management company. Observe the applicable national standards and guidelines.

4.1 User agreement for the LEICHTmount 2.1 E/W

We wish to point out that the mounting system is sold under a purchase contract.

Installation/processing or its acquisition by a third party is not carried out in the name of, or on behalf of, S:FLEX GmbH. It must be undertaken by appropriately qualified personnel and strictly in accordance with the installation instructions.

The design and planning of the system must be undertaken using the S:FLEX Planning Software (Solar.Pro.Tool). S:FLEX GmbH is neither responsible for the project-specific structural analysis of the roof structure, nor for obtaining and documenting the consent of the roof manufacturer in respect of being able to use the relevant mounting system on the roof in question (in the terms of the warranty), nor for the correct installation of the mounting system.

S:FLEX GmbH will not be liable for faults and damage and/or a restricted or limited operational capability of the system which has resulted from defective installation and/or installation which was not undertaken in accordance with the installation instructions and/or the project report (Solar.Pro.Tool). In the case of improper installation, the buyer's right to assert claims for material defects shall expire.

The system warranty is only valid if all system components are acquired from S:FLEX GmbH.

The system requires approval for the modules to also be mounted in the indicated manner (i.e. clamped on the modules' shorter side). This approval can either be given generally as part of the module certification or, as the case may be, issued by the module manufacturer on a project-specific basis.

4.2 Warranty / disclaimer

The information regarding dimensioning provided in these instructions are merely suggestions based on prior experience. Binding installation frame structural analyses can be created using the S:FLEX planning software (Solar.Pro.Tool).

As an installation company, you are responsible for the correct execution of the installation. S:FLEX GmbH is not liable for the dimensional information contained in commercial system quotations.

As an installation company, you are responsible for the mechanical durability of the interface connections mounted on the building's structure. In particular, this includes ensuring that these are leak-tight. The components supplied by the company S:FLEX GmbH are designed for the expected loads in accordance with the current technological state of the art.

In this context, you must provide the company S:FLEX GmbH with information about all general technical conditions in writing via the project data collection sheet (information about the supporting structure, snow load zone, building heights, wind loads, etc.).

S:FLEX GmbH is not liable if the installed components are not properly handled. Any use close to the sea needs to be clarified with S:FLEX GmbH directly on a case-by-case basis due to the increased risk of corrosion. Provided that the system is handled properly and dimensioned according to the structural conditions and normal environmental and ambient conditions, the company S:FLEX GmbH provides a warranty from transfer of risk to the warranty holder, which guarantees that the metallic components of the racks will remain free from defects with regard to material and workmanship for a period of 10 years. This warranty does not apply to wear parts. For additional information, please refer to the separate warranty provisions.

This applies within the context of generally prevalent weather and environmental conditions.